


# Remote Asset Monitoring Solutions




## Download and use The LevelCon Smartphone App:

To download the LevelCon app, search for it in the Google play store or itunes, or use your smartphone camera or QR code reader to download from these links.

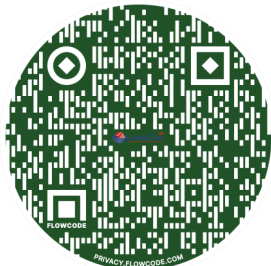


Android App

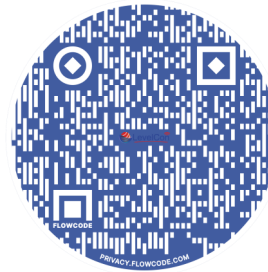


iOS App


## Running the App for the first time:

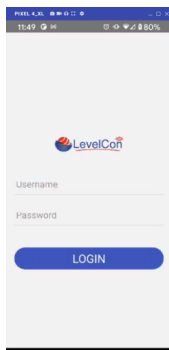


Log In Page

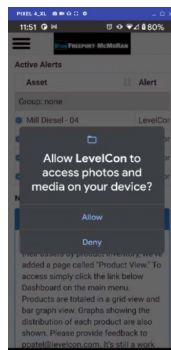


Allow Access

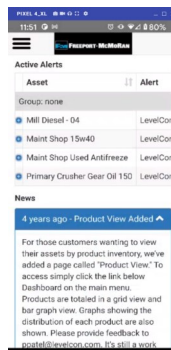


Click On Navigation

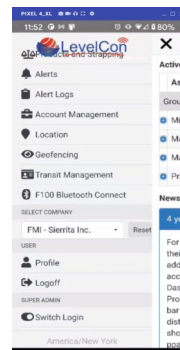


Scroll to F100 Bluetooth Connect

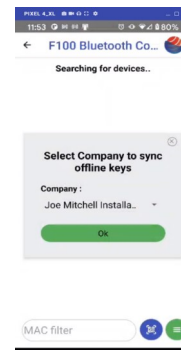


OK to Sync Company Assets

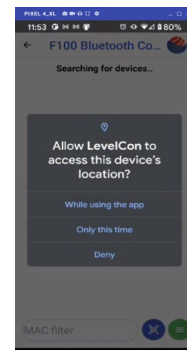


Allow Location

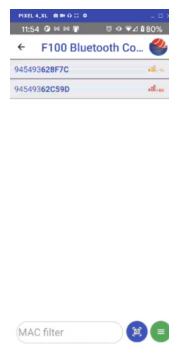


Click on your found device or use blue QR Scan

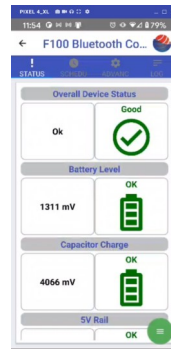


Status page with blue navigation bar

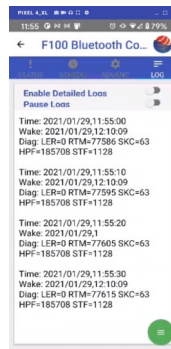


To force a report, click On Log

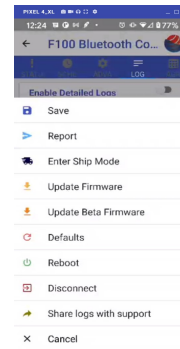

Click on Report

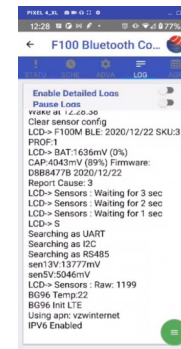

Watch the unit report.

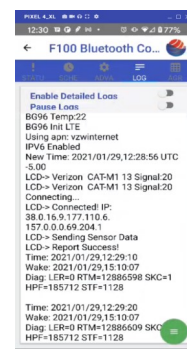

Report Success, or Report Fail





# Remote Asset Monitoring Solutions



## Navigation Bar:

There are 3-4 navigation icons depending on the advanced settings of your LevelCon monitor.

- **Status:** This is the landing page which displays the health of your monitor: Battery, Capacitor, sensor rail voltage (5v & 12V) Ambient Temp, Barometric Pressure and Last Sensor value.
- **Schedule:** This will allow users to set the report interval in a rate or specific times of the day (input in military time). It is also where users configure "Sleep Hours".
- **Advanced:** Users should not use this tab unless trained or with support of a LevelCon rep. This allows you to make configuration specific changes that can alter the performance of your monitor.
- **Log:** This allows users to view the report sequence and debug potential unit errors.
- **AGR:** This feature allows users to pair other BLE enabled devices to talk to the Unit. AGR Time must be set, in seconds (60) under the Advanced Tab
- **Command Circle:** This is the green circle with 3 horizontal lines

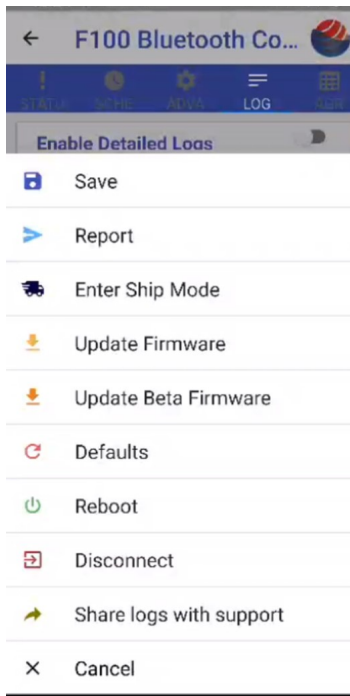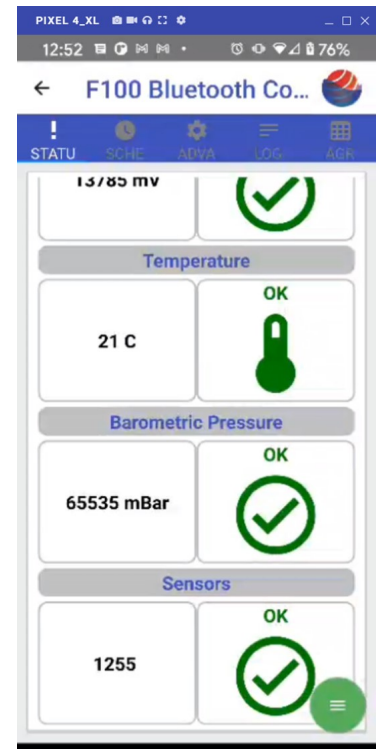

## Command Circle :

This allows users to perform certain functions of the monitor's settings.

- **Save:** Users must click save after making any changes to the schedule or advanced tab features.
- **Report:** This forces the monitor to report on demand.
- **Enter Ship Mode:** This puts the monitor asleep and cannot be woken unless forced to exit ship mode.
- **Update Firmware:** Updates the monitor to the latest firmware release.
- **Defaults:** This restores the unit to the original factory settings.
- **Reboot:** This forces the monitor to reboot and report.
- **Disconnect:** This breaks any BLE unit connection to the phone and returns them to the list of available BLE monitors.
- **Share Logs:** Allows users to share log files with LevelCon Support
- **Cancel:** Exits and breaks any BLE unit connections to the phone

