

## F100 WiFi Configuration

### The Basics

- The F100M, in WiFi Config mode, produces a wireless connection to any smartphone, much like pairing your smartphone to a bluetooth device.
- The F100 unit can be setup without being in range of any WiFi network.
- The F100 creates a temporary WiFi network for Setup.
- You will need to know how to search for and connect to WiFi networks with a smartphone, tablet, or similar device. Setup requires Javascript.

### Setup - Connect to the F100

For Setup, the F100 will create a temporary WiFi connection with a WiFi enabled, web enabled, device like a smartphone or laptop. This temporary connection is used only for setup.


#### 1) Press and hold the force report button until “WiFi Config Enabled and then release.

The screen will show the firmware release date, then the battery and capacitor level, and finally WiFi Config Started



#### 2) Search for available WiFi networks


on your setup device (smartphone, tablet, laptop, or computer). “F100-XXXX” (XXXX are the last 4 characters of the F100 serial number.) You may see a shield with an exclamation point next to the F100 network name. This is a normal part of the F100 network

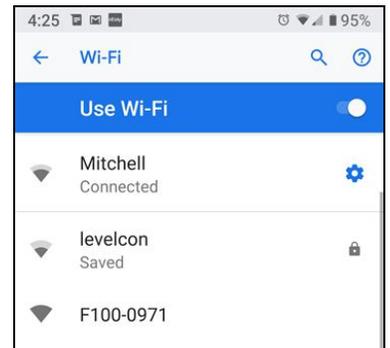

#### 3) Select the F100 network.

Depending on the model and release of your phone, you will see the message “Tap here to sign into Network”. Tap on this and the configuration page will automatically load.

If not, you may have to open your device’s web browser and navigate to [192.168.10.1](http://192.168.10.1)

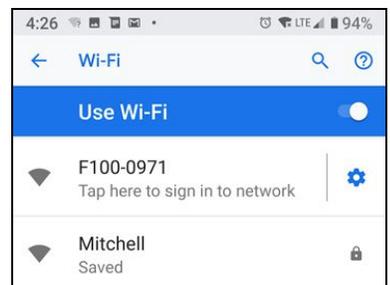



#### 4) The Configuration Main Page.

The main configuration page will look like this with three tabs at the top: Basic, Schedule, and Advanced.



#### 5) Setting the unit report frequency

Click on the Schedel Tab. You can set the report rate (i.e. how often you want the unit to report in seconds) such as 3600sec. for hourly reporting, 7200 for every other hour, etc.



Or you can scroll down the page to the next section to set specific wake alarm intervals.

#### 6) Specific Wake Alarm Intervals

To set specific report times, fill in the 24 hour definition of the times for which you want the monitor to report. i.e. 0800= 8Am, 1400 = 2pm



You can set up to 10 unique wake alarms.

#### 6) Save and Reboot

Once you have set your report times, be sure to click the blue "save" button at the bottom of the page and wait until you see it change green and display "saved!".



Then click reboot to restart the monitor and force a report.